

How to use Inflatable Polywoven Air Dunnage Bag Intermodal & Highway Bag

1. Press inflator tool into valve



2. Push yellow sleeve onto the outer ridge of air valve. This will then lock into place.



3. Fill bag until air blows back from the inflator, indicating 2 lbs. of pressure.



4. To release, pull yellow sleeve back away from the bag.

5. To deflate, push blue valve in and twist. This will open valve for reusability or repositioning

